

---

## RTSP URL for NVR/DVR

### Without Password

- **URL Format** – rtsp://<device IP>:554/<channel ID>/<stream ID>
- **Device IP:** replace with the actual IP address of the device. Example: 192.168.0.121
- **Channel ID:** replace with the exact channel of the camera you would like to stream
- **Stream ID:** replace with 1, 2 or 3 for the camera Stream ID
- **Example:** *rtsp://192.168.0.121:554/3/1*

### With Password

- **URL Format** – rtsp://username:password@<device IP>:554/<channel ID>/<stream ID>
- **Username:** replace with device username
- **Password:** replace with device password
- **Device IP:** replace with the actual IP address of the device. Example: 192.168.0.121
- **Channel ID:** replace with the exact channel of the camera you would like to stream
- **Stream ID:** replace with 1, 2 or 3 for the camera Stream ID
- **Example:** *rtsp://admin:admin123@192.168.0.121:554/3/1*

### Notes:

- Port 554 is the default RTSP port number of the NVR/DVR. If you changed this port number in the device setting, you need to use the new RTSP port number in the RTSP URL.
- Make sure that you also have the username and password of the NVR/DVR as it is needed to access the devices via RTSP.